

## Instruction Manual

### ICM 2000

#### DC/AC Clampmeter

(EN) (FR) (IT) (DE) (ES)

---





## Warnings and Safety symbols:



Caution, refer to this manual before using the meter.



Dangerous voltages.



Meter is protected throughout by double insulation or reinforced insulation.



Comply with IEC1010-1


**When servicing, use only specified replacement parts.**

# TABLE OF CONTENTS

1.Features.....	1
2. Panel Description.....	2
3.Operation Instructions .....	5
3.1. DC/AC Current Measurements .....	5
3.2. DC/AC Voltage Measurements.....	7
3.3. Resistance Measurement.....	8
3.4. Continuity Measurement.....	8
3.5. Change from Auto-range Mode to Manual Mode.....	9
3.6. Relative Reading Measurements.....	9
3.7. Holding the LCD Reading .....	9
3.8. Finding the MAX/MIN Value.....	9
4.Specifications .....	10
5.Battery Replacement.....	13
6. Maintenance & Cleaning .....	14

1. Accurate DC/AC digital clamp meter for current measurement.
2. DC 2500A, AC 2100A (True RMS ).
3.  $\phi$ 55 mm diameter jaw.
4. One touch zero for DCA adjustment.
5. Auto-range for A, V, and  $\Omega$ .
6. Large 3 3/4 digits LCD
6. Fast bargraph display (20 times/sec.) for transient observation.
7. Continuity with buzzer.
8. Max/Min and Data Hold functions.
9. 600V overload protection for ohm measurement.
10. Easy single rotary switch for any function selection.

## 2. Panel Description. Panel Description

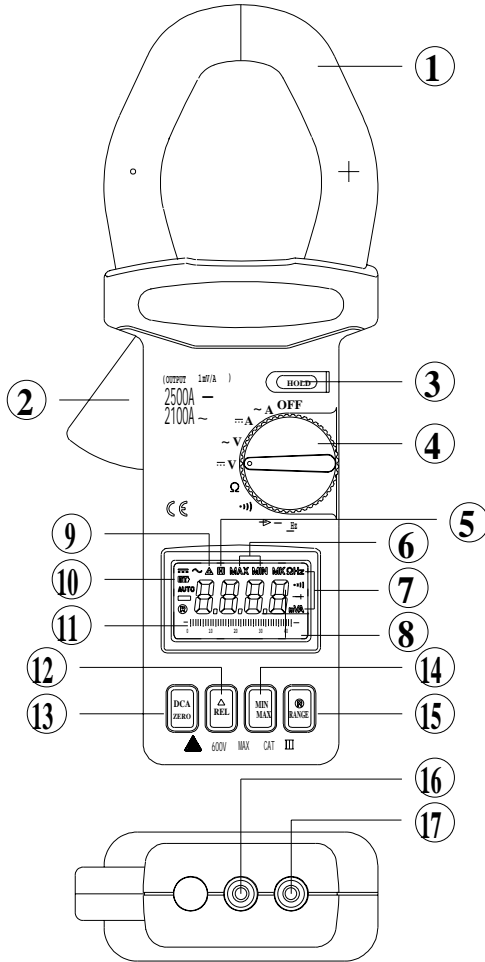

1. Transformer Jaw  
This is used to pick up a current signal. To measure DC/AC current, a conductor must be enclosed by the jaws.
2. Transformer Trigger  
This is used to open the jaws.
3. Data Hold Button  
Press this button to hold the current reading in the LCD display. Press it again to release the HOLD function .
4. Function Selection and On/Off Switch  
This is used to select the desired function, such as DCA, ACA, DCV, ACV, Hz, Ohm and Continuity.
5. Data Hold Symbol  
Once the hold button is pressed, this symbol appears in the LCD display.
6. Max/Min Hold Symbol  
Once the max/min button is pressed, either MAX or MIN shall be displayed on LCD
7. Units Symbols  
Once a function is selected, the corresponding unit (V,  $\Omega$ , A, or Hz) shall be displayed on LCD.
8. LCD  
This is a 3 3/4 digit Liquid Crystal Display with maximum indication of 3999. Function symbols, units, bargraph, sign, decimal points, low battery symbols, max/min symbols, and zero symbol are included.
9. Zero/Relative Symbol  
When this symbol appears, it means a reference value has been subtracted from the actual reading. The reading shown is an offsetted value. Press and hold the zero button for 2 seconds to disable this function.
10. Low Battery Symbol  
When this symbol appears, it indicates that the battery voltage has dropped below the minimum required voltage. Refer to Section V for battery replacement.
11. Analogue Bargraph  
The Bargraph has forty segments. It displays segments proportional to the actual reading. Each segment represent ten counts.

## 12. Relative Button

Once this button is pressed, the current reading shall be set to zero and be used as a zero reference value for all other subsequent measurement. The function can also be used to offset readings caused by the residual magnetism remaining in the core for DC current measurements. Once this button is pressed, the clamp meter will change to manual mode instead of auto-range mode. The Relative function will be disabled if Max/Min function is enabled.

## 13 DCA ZERO button

This button is used for DCA ZERO function. To zero the DCA residual value, press this button until the LCD displays zero. If the DCA ZERO button is used to zero a DCA value, the clamp meter is still in auto-range mode. ( It is different from the the relative button which forces the clamp meter change to manual mode.)

## 14. Max/Min Hold Button

This button is used to enable the maximum or minimum value to be displayed and updated during measurement. Press it once and the minimum value shall be displayed and updated. Press it again and the maximum value shall be displayed and updated. Press it again (the third push) and the clamp meter returns to normal measurement mode. The Zero function will be disabled if MAX/MIN is enabled.

## 15. RANGE button

Once the button is pressed, the clamp meter goes into manual mode. To select the desired range, press and release the button once. To return to the autorange mode, press and hold the button for more than 2 seconds.

## 16.COMTerminal

This terminal is used as common reference input.

## 17.V $\Omega$ Input Terminal

This terminal is used as an input for voltage, ohm/continuity, or frequency measurements.




### 3.Operation Instructions.Operation Instructions

#### 3.1. DC/AC Current Measurements

##### WARNING

Make sure that all the test leads are disconnected from the meter's terminals for current measurement.

##### 3.1.1. DC Current

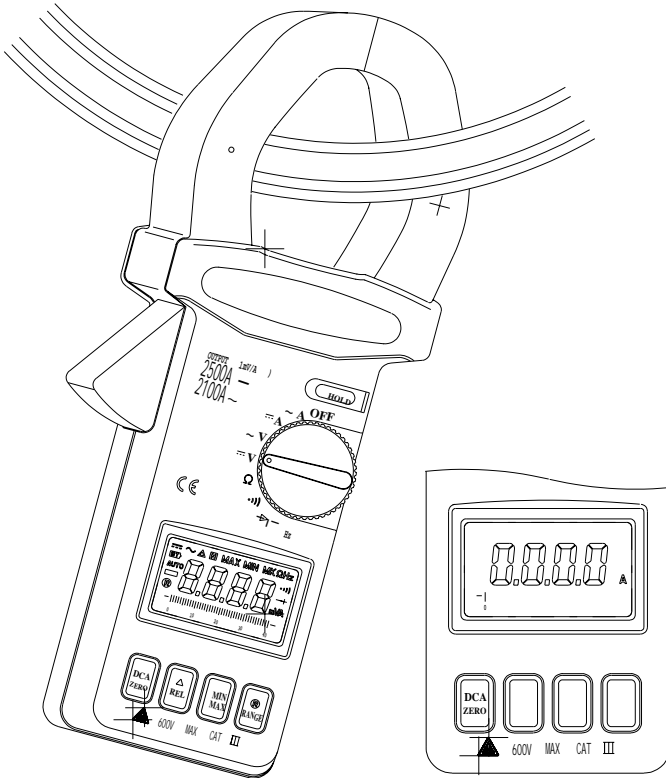


- a. Set the rotary switch at DCA.
- b. Push and hold the DCA ZERO button until the reading shows zero.
- c. Press the trigger to open the jaws and fully enclose the conductor to be measured. No air gap is allowed between the two half jaws.
- d. The clamp meter will automatically select the appropriate range. If the user wants to select a range manually, press the range button before pressing the DCA ZERO button.
- e. Read the measured value from the LCD display.

**Note**


There are two ways to zero the DCA residual value. Use the DCA zero button and the clamp meter is in auto-range mode. Use the REL button and the clamp meter will change to manual mode for DCA measurement.

### 3.1.2. AC Current

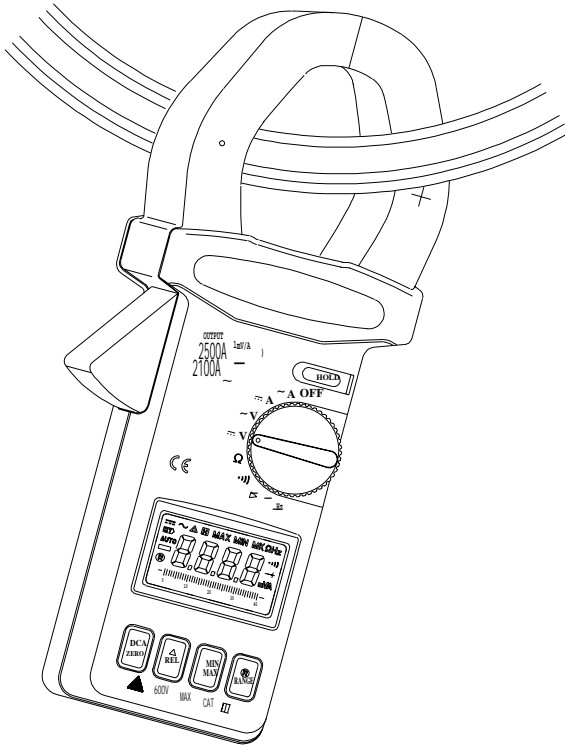

- a. Set the rotary switch at ACA.
- b. In AC current measurement, ZERO is not needed. Do not press DCA ZERO button.
- c. Press the trigger to open the jaw and fully enclose the conductor to be measured. No air gap is allowed between the two half jaws.
- d. The clamp meter will automatically select proper range. If users want to select range, press the range button before pressing the DCA ZERO button.
- e. Read the measured value from the LCD display.

Connecting to an Oscilloscope or a Datalogger

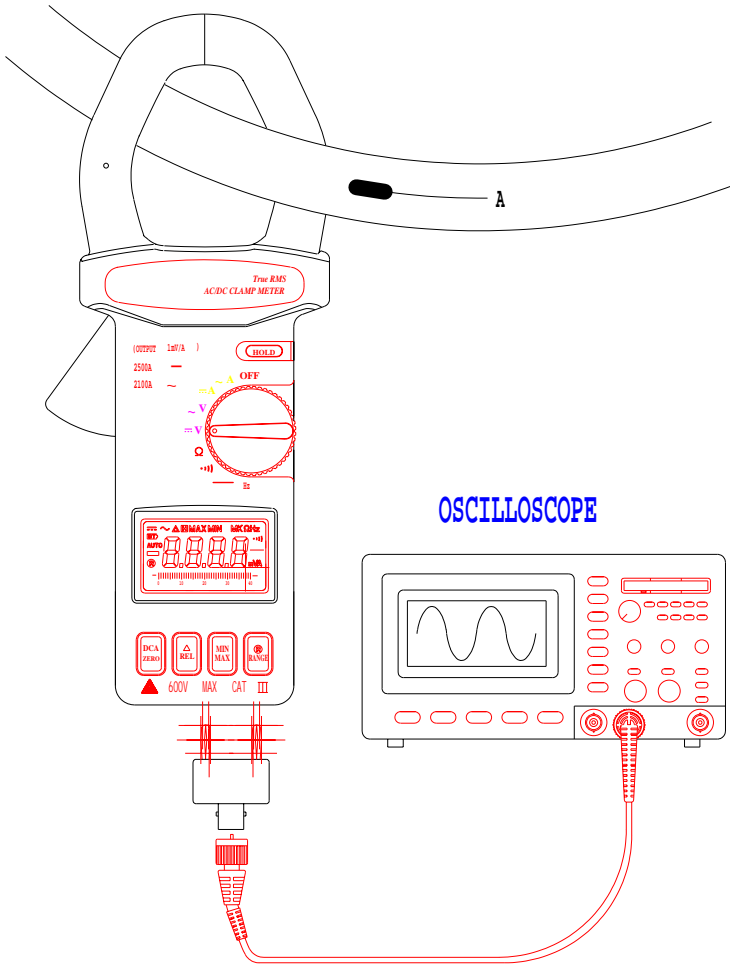


- Set the rotary switch at ACA or DCA
- Analog signal is output from the bottom terminals at the same time. The output is proportional to the current measured (1mV/A).
- The red terminal is the positive while the black is the negative of the signal.
- Connect these two terminals to an oscilloscope or a datalogger, users can observe the current wave form or do the long term data recording.

### 3.2. DC/AC Voltage Measurements.

TEST EQUIPMENT RISK ASSESSMENT (UK RECOMMENDATION)

Users of this equipment and/or their employers are reminded that Health and Safety legislation requires them to carry out valid risk assessments of all electrical work so as to identify potential sources of electrical danger and risk of electrical injury such as from inadvertent short circuits. Where assessments show that the risk is significant then the use of fused test leads constructed in accordance with the HSE note GS38 “Electrical Test Equipment for use by Electricians” should be used.

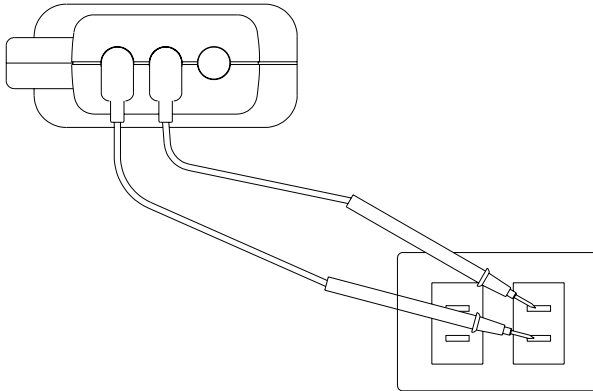

**WARNING**

Maximum input for DC V is 1000, and for AC V is 750. Do not attempt to take any voltage measurement that exceeds the limits. Exceeding these limits could cause electrical shock and damage to the clamp meter.

3.2.1.DC Voltage

- a. Set the rotary switch to V DC.
- b. Insert the test leads into the input terminals.
- c. Connect the test probes of the test leads in PARALLEL to the circuit to be measured.
- d. The clamp meter will automatically select the appropriate range. If manual selection of the range is required, press the range button.
- e. Read the measured value from the LCD display.

3.2.2.AC Voltage

- a. Set the rotary switch to V AC
- b. Insert the test leads into the input terminals.
- c. Connect the test probes of the test leads in PARALLEL to the circuit to be

- measured.
- d. The clamp meter will automatically select proper range. If users want to select range, press the range button.
  - e. Read the measured value from the LCD display.

### **WARNING**

Before taking any in-circuit resistance measurement, remove power from the circuit being tested and discharge all the capacitors.

### 3.3. Resistance Measurement

- 3.3.1. Set the rotary switch to  $\Omega$
- 3.3.2. Insert the test leads into the input terminals.
- 3.3.3. Connect the test probes of the test leads to the two ends of the resistor or circuit to be measured.
- 3.3.4. The clamp meter will automatically select proper range. If manual selection of the range is required, press the range button.
- 3.3.5. Read the measured value from the LCD display.

### 3.4. Continuity Measurement.

- 3.4.1. Set the rotary switch to Continuity
- 3.4.2. Insert the test leads into the input jack.
- 3.4.3. Connect the test prods of the test leads to the two ends of the resistor or circuit to be measured.
- 3.4.4. Read the measured value from the LCD display.
- 3.4.5. If the resistance is lower than  $40 \Omega$ , the internal sounder will operate.

### Diode Test

- a. Set the rotary switch to diode test.
- b. Insert the test leads to the input terminals
- c. Connect the test probes of the test leads to the two ends of a diode
- d. Read the diode voltage from the LCD display

### 3.5 Frequency Measurement

- a. Set the rotary switch to Hz
- b. Insert the test leads to the input terminals
- c. Connect the test probes of the test leads to the circuit to be measurement.
- d. Adjust the voltage sensitivity by pressing RANGE button. The default sensitivity is 10mV. Pressing RANGE button will change the sensitivity to 100mV, or 1V. The

sensitivity will be displayed momentarily when RANGE button is pressed.

The higher the frequency, the higher the sensitivity (such as 100mV or 1V) may be needed. If the sensitivity is set at 10mV, a stable reading might not be obtainable on the LCD display.

### 3.6. Relative Reading Measurements.

The REL button can be used to make a relative measurement. Once the button is pushed, the current reading is set to zero and a zero symbol shall be displayed on LCD. All the subsequent measurement shall be displayed as a relative value with respect to the value being zeroed. Press the zero button for 2 seconds to return to normal mode. But this function is disabled if MAX/MIN function is enabled. Please watch for the symbol displayed on LCD.

### 3.7. Holding the LCD Reading

Press the HOLD button, then the reading shall be held and kept on LCD.

### 3.8. Finding the MAX/MIN Value.

Press the MAX/MIN button to enable the maximum and minimum values to be recorded and updated during measurement. Push the button once, the maximum value shall be displayed and updated. Push again (second push), the minimum value shall be displayed. Push again (third push), MAX/MIN function shall be disabled and return to the normal measurement mode. If MAX/MIN button is pressed, the ZERO function will be disabled and the ZERO symbol will disappear from LCD.

#### 4. Specifications (@ 23°C ±5°C)

##### DC Current:

Range	Resolution	Accuracy (of rdg)	Overload Protection
400A	0.1A	±1.5%±3dpts	DC 3000A
0-2000A	1A	±1.5%±3dpts	DC 3000A
2000-2500A	1A	±2.0%±3dpts	DC 3000A

##### AC Current (True RMS Crest Factor < 4):

Range	Resolution	Accuracy (of rdg)		Overload Protection
		50/60 Hz	40 - 1KHz	
400A	0.1A	±1.5%±5dpts	±2.0%±5dpts	AC 3000A
0-1000A	1A	±2.0%±5dpts	±2.5%±5dpts	AC 3000A
1000-2100A	1A	±2.5%±5dpts	±3.0%±5dpts	AC 3000A

##### Current Analog Output

Range	Output	Accuracy	Overload Protection
0 - 400A	1mV/A	±2.5% ±0.5A	600V AC
400 - 2100A	1mV/A	±2.5% ± 5A	600V AC

##### DC Voltage:(Autorange & Manual, Overload Protection 800VAC for all range)

Range	Resolution	Accuracy(of rdg)	Input Impedance
400mV	0.1mV	±1.5%±3dpts	10MΩ
4V	0.001V	±1.5%±3dpts	5MΩ
40V	0.01V	±1.5%±3dpts	5MΩ
400V	0.1V	±1.5%±3dpts	5MΩ



600V	1V	$\pm 1.5\% \pm 3$ dgts	5M $\Omega$
------	----	------------------------	-------------

### AC Voltage(True RMS , Crest Factor < 4)

(Autorange & Manual, Overload Protection 800VAC for all range)

Range	Resolution	Accuracy (of reading)		Input Impedance
		50/60 Hz	40 - 1KHz	
400mV	0.1mV	----- <sup>1</sup>	----- <sup>1</sup>	----- <sup>1</sup>
4V	0.001	±1.5%±5dgts	±2.0%±5dgts	5MΩ
40V	0.01V	±1.5%±5dgts	±2.0%±5dgts	5MΩ
400V	0.1V	±1.5%±5dgts	±2.0%±5dgts	5MΩ
600V	1V	±1.5%±5dgts	±2.0%±5dgts	5MΩ

<sup>1</sup> Though 400mVAC can be selected by RANGE key, it is not designed to measured AC mV. So no accuracy is listed for AC 400mV range.

### Resistance Ω (Autorange & Manual, Open Circuit Voltage ≤ 0.5V)

Range	Resolution	Accuracy (of reading)	Overload Protection
400Ω	0.1Ω	±1.5%±3dgts	600VAC
4KΩ	1Ω	±1.5%±3dgts	600VAC
40KΩ	10Ω	±1.5%±3dgts	600VAC
400KΩ	100Ω	±1.5%±3dgts	600VAC
4MΩ	1KΩ	±1.5%±3dgts	600VAC
40MΩ	10KΩ	±1.5%±3dgts	600VAC

### Resistance (Ω) and Continuity:(open voltage 0.4V)

Range	Resolution	Accuracy	Beeping	OL Protection
40-400Ω	0.1Ω	±1.0% rdg± 2dgts	< 40.0 Ω (approx.)	AC 600V

**Diode Test**

Range	Resolution	Accuracy	Overload Protection
3V	0.001V	$\pm 2.5\% \pm 5$ dgts	600VAC


Frequency (Hz, Overload Protection 600VAC, Sensitivity selected by RANGE button)

Range	Resolution	Accuracy	Sensitivity
100Hz – 1000KHz	0.01Hz - 100Hz	$\pm 0.5\% \pm 2$ dgts	10mV/100mV/1V

Indoor Use

Conductor Size	: Cable $\Phi$ 55mm. (approx.) Bus Bar 65mm(D) x 24mm(W)
Battery Type	: 9V
Display	: 3 3/4 LCD with 40 seg. bargraph
Range Selection	: Auto and manual
Overload Indication	: left most digit blinks
Power Consumption	: 12 mA (approx.)
Low battery Indication	: <span style="border: 1px solid black; padding: 2px;">B</span>
Sampling Time	: 2 times/sec. (display) 20 times/sec. (bargraph)
Operating Temperature	: 4°C to 50°C
Operating Humidity	: less than 85% relative
Altitude	: up to 2000M
Storage Temperature	: -20°C to 60°C
Storage Humidity	: less than 75% relative
Dimension	: 271mm (L) x 112mm (W) x 46mm (H) 10.7" (L) x 4.4" (W) x 1.8" (H)
Weight	: 647 g/22.8 oz (batteries included)
Accessories	: Carrying bag x 1 Users manual x 1 9V battery x 1

## 5. Battery Replacement

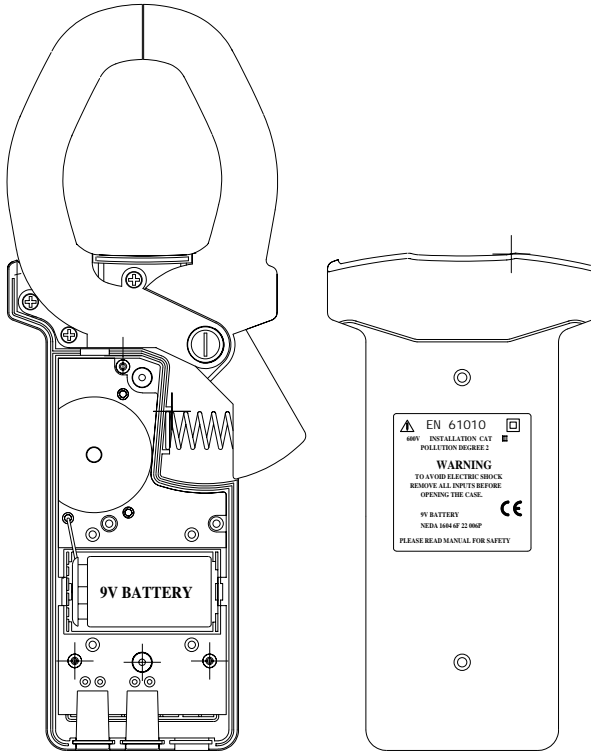

When the low battery symbol is displayed on the LCD, replace the old battery with a new battery.

- 5.1. Turn the power off and remove the test leads from the clamp meter.
- 5.2. Remove the screws from the bottom half of the case.
- 5.3. Lift and remove the bottom half of the case.
- 5.4. Remove the old battery.
- 5.5. Insert new 9V battery.


5.6. Replace the bottom half of the case and secure the screws.

### **WARNING**

 Do not touch or adjust any parts inside the clamp meter when the bottom case is open.

## **6. Maintenance & Cleaning**

Servicing not covered in this manual should only be performed by qualified personnel. Repairs should only be performed by qualified personnel. Periodically wipe the case with a damp cloth and detergent; do not use abrasives or solvents.



**Asia**

Iso-Tech  
460 Alexandra Road, #15-01A  
PSA Building  
Singapore 119963

**Europe**

Iso-Tech  
PO Box 99  
Corby  
Northamptonshire  
NN17 9RS  
United Kingdom

**Japan**

West Tower (12th Floor)  
Yokohama Business Park  
134 Godocho, Hodogaya  
Yokohama, Kanagawa 240-0005 Japan

**USA**

7410 Pebble Drive  
Fort Worth  
Texas 76118-6961

**Canada**

1701 Woodward Drive  
Ste 108 Ottawa  
Ontario K2C 0R4, Canada

**South America**

Av. Pdte. Eduardo Frei M. 6001-71  
Centro Empresas El Cortijo  
Conchalí, Santiago, Chile

Jun-2010